

## INTRODUCTION

Your new Neptune meter is a radio frequency unit that collects meter-usage data and transmits the data for collection. This data is transmitted to a Neptune mobile handheld device used by our meter readers.

# **FEATURES**

- 1. The usage data logging capability provides up-to-the hour consumption data that is recorded as it happens, every hour on the hour. The leak indicator checks usage every 15-minutes in a 24-hour period.
- 2. This usage data logging information directly from the meter can be retrieved and ultimately provide a graphic chart (if necessary) showing daily or hourly consumption.
- 3. The chart will help identify existing or potential problems such as a possible leak and when the leak occurred.

# **INTRODUCING YOUR NEW**

# **NEPTUNE WATER METER**

Learn about its features and how to read your meter.

# LIGHT SENSOR

Recessed small hole (next to flashlight icon). Supplies the power for the LCD panel (light activated).

On your LCD screen you may see the following icons.



#### **FLOW INDICATOR**

Shows the direction of flow through the meter.

ON Water in use

**OFF** Water not in use

Flashing Water is running slowly

- (-) Reverse flow
- (+) Forward flow



#### LEAK INDICATOR

Displays a possible leak.

**OFF** No leak indicated

Flashing Intermittent leak indicates that water has been used for at least 50 of the 96
15-minute intervals during a 24-hour period

# **On Continuously**

Indicates water use for all 96 15-minute intervals during a 24-hour period

# **RATE**

## **RATE OF FLOW**

Average flow rate is displayed every 6 seconds on LCD display.



# 000889298

### **LCD DISPLAY**

Nine digit LCD displays the meter reading in billing units of gallons.

Read is followed by a decimal point

Then a number that is 10 ths of a gallon

Then a number that is 100 ths of a gallon

# How to read your meter

The read in the photo is 8,892.96 gallons